




ALERT (LED MESSAGE SIGN)

Dimensional Data

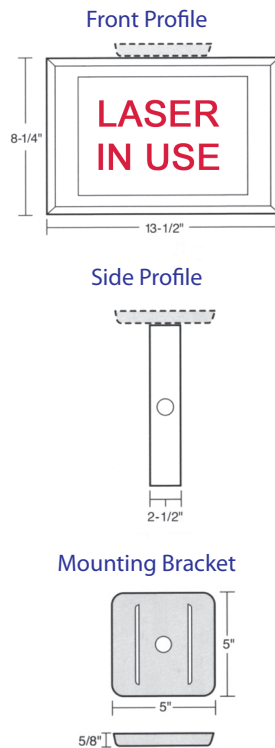

Specifications

- Construction:** Heavy gauge die cast aluminum housing with soft cornered design.
- Sign Face:** High grade thermoplastic shield with white opaque background and laser cut letters (legend) in red, green or blue with corresponding LED colors.
- Electrical:** Internally mounted universal 120-277v transformer driving an LED strip. A polarized plug, with quick disconnect is provided between LED board and transformer for easy installation and maintenance.
- LED's:** Top mounted, downward facing LED board illuminates the color legend; LED colors are available in red, green or blue; accent down light on bottom edge is standard (lamps included).
- Switching:** Line voltage switching by others.
- Mounting:** Surface - single side legend.
Canopy (top/end) - single side legend.
Canopy (top/end) - double side legend.
- Options:** Emergency battery back-up (90 minutes).
- Seismic:** Unit weighs less than 20lbs. OSHPD pre-approval not required.
- Finishes:** Textured white finish.
- Listings:** Meets the requirements of the DOE Energy Star Program. UL and C-UL listed.
- Warranty:** 5-year limited warranty. Made in the USA.

Power Input Table

| INPUT VOLTAGE | AC MODELS | | AC/DC MODELS | |
|---------------|-----------|------|--------------|------|
| | 120V | 277V | 120V | 277V |
| WATTAGE | 1.2W | 1.2W | 2.5W | 2.5W |

Specifications subject to change. Please visit our web site for updated information.

ALERT



Ordering Information

Example: HSG301-ARAW-B-TS

| 1 | 2 | 3 | 4 |
|--|--|---|--|
| SERIES | SIGN LEGEND | LEGEND & LED COLOR | OPTIONS |
| HSG301 Surface mount with single side legend | DRIU DARKROOM IN USE DNE DO NOT ENTER IU IN USE XIU X-RAY IN USE XO X-RAY ON MIU MRI IN USE EX EXIT ARA AREA OF RESCUE ASSISTANCE ARAW AREA OF RESCUE ASSISTANCE (with wheelchair graphic) | BO BEAM ON BR BEAM READY LIU LASER IN USE AOR AREA OF REFUGE SW SPECIAL WORDING | G Green R Red B Blue EM Emergency battery backup TS Tamper resistant screws VS Vandal resistant polycarbonate face shield |