


# OMNILUME 2X4 CENTER BASKET (T5)



## Dimensional Data

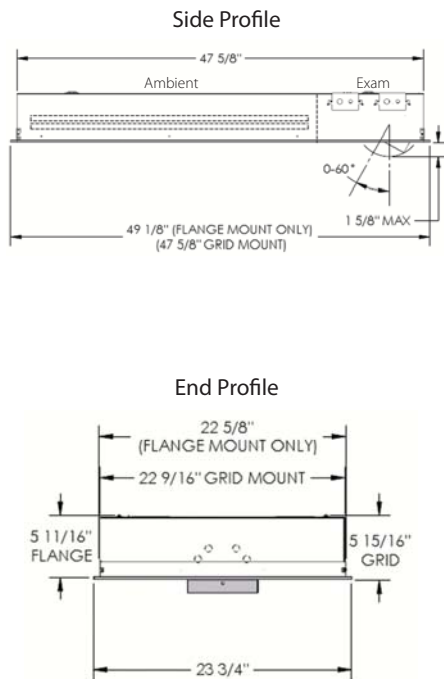

## Specifications

- Construction:** 18GA steel housing and 24GA reflectors for flange or 1" grid ceilings. Exam head rotates from 0° to 60°.
- Lamp Shield:** Extruded acrylic lens basket with perforated acrylic insert.
- Electrical:** 120 or 277 volt.
- Ambient:** (4) 21w T5 lamps (by others).
- Exam:**
- MA:** Motorized Examination System includes:
- Healthcare Lighting's Class 2, four Circuit Low Voltage Controller for patient bedside control of ambient compartment through existing nurse call pillow speaker/handset. *If nurse call system is not available, use JPS option.*
  - Class 2 Wall Switch for control of motorized examination head. Fits a standard 2 gang electrical box (by others).
  - (3) 75w CRI 100, MR16 lamps (included) with heat dissipating dichroic filters. 13° beam, 4,000 hour lamp life.
- FA:** Non-Motorized Examination System includes:
- Non-motorized examination head is manually adjusted at time of installation.
  - Patient bedside control of ambient compartment is available through Low Voltage Controller (LVC) options below.
  - (3) 75w CRI 100, MR16 lamps (included) with heat dissipating dichroic filters. 25° beam, 4,000 hour lamp life.
  - On/off line voltage switching (by others).
- Chart Light:** Optional (1) 3w Cool White LED or (1) 10w MR11.
- Seismic:** OSHPD pre-approved (OPA-2101-07).
- BIM:** Building Information Modeling files available on web site..
- Finishes:** Polyester powder coated after fabrication with either flat white or designer white antimicrobial finish.
- Listings:** UL and C-UL listed.
- Warranty:** 5-year limited warranty. Made in the USA by Healthcare Lighting's ISO certified facility in Fairview, PA.

Specifications subject to change. Please visit our web site for updated information.

## OMNILUME 2X4 CENTER BASKET



## Ordering Information

Example: HPT224-MA-G-277-2C-LEDCL-NLF-JPS-EC-AM

1	2	3	4	5	6	7	8
HPT224							
<b>SERIES</b>	<b>EXAM TYPE</b>	<b>MOUNTING</b>	<b>VOLTAGE</b>	<b>AMBIENT (LVCs - FA Only)</b>	<b>AMBIENT (LIGHT LEVELS)</b>	<b>OPTIONS</b>	<b>FINISHES</b>
HPT224	MA Motorized	G T-Grid	120	LC Class 2 UL listed Low Voltage Controller (use for interface with existing nurse call pillow speaker/handset)	1C 1 Circuit <i>(On/off control of 4 lamp ambient profile)</i>	LEDCL LED Chart Light on left	FW Flat white finish
	FA Non-Motorized	F Flange	277		2C 2 Circuits <i>(Bi-level control of 4 lamp ambient profile)</i>	CR11 MR11 Chart Light on right	AM Designer white antimicrobial finish
			347		DM Dimming <i>(Please specify type of ambient dimming. Switches/dimming controls by others. Only available with SX)</i>	CL11 MR11 Chart Light on left	
				LC1 LC plus 1-gang j-box cover with receptacle and pillow switch w/ 6' cord (use when nurse call system is unavailable)	NLF 9w 4-pin (2G7) PL Night Light	SB Slo-blo fuse	
				SX No LVC	BLP Backlit Panel (see "Image Gallery" on web site)	JPS 1-gang j-box cover with receptacle & pillow switch w/ 6'cord. Use when nurse call system is unavailable (MA only)	
					EC Remote pendant exam control cord with holder bracket (MA only)		