


SIERRA


2', 3' or 4' (T8, T5 or T5HO)

Dimensional Data

Side Profile



Lamp Profiles

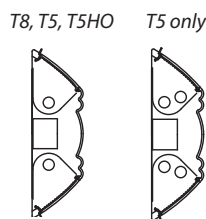

Fixture Dimensions

Product No.	T8	T5/T5HO
HPW524	28-1/4"	26-5/8"
HPW536	40-1/4"	38-7/16"
HPW548	52-1/4"	50-1/4"

Specifications

- Construction:** Extruded aluminum housing with die cast aluminum end caps.
- Electrical:** 120 or 277 volt.
- Lamp Shield:** High impact acrylic lens.
- Lamps:** 2 foot nominal: 17w T8, 14w T5 or 24w T5HO lamps (by others). 3 foot nominal: 25w T8, 21w T5 or 39w T5HO lamps (by others). 4 foot nominal: 32w T8, 28w T5 or 54w T5HO lamps (by others).
- BIM:** Building Information Modeling files available for 4' with T5 lamps.
- Finishes:** Polyester powder coated after fabrication with either flat white or designer white antimicrobial finish. Custom colors are also available.
- Listings:** ADA compliant per 4.4.1 of 28 CFR Part 36 (7-1-94). UL and C-UL listed.
- Warranty:** 5-year limited warranty. Made in the USA by Healthcare Lighting's ISO certified facility in Fairview, PA.

Features

The Sierra low-profile wall bracket meets the standards of the 1990 Americans with Disabilities Act, (ADA). Extending less than 3" from the wall, it is the perfect choice for patient rooms, corridors and stairways. A sloping top lens allows for optimum light distribution, while reducing the potential for dust buildup.

The Sierra's innovative design shields lamp silhouette; yet, it provides a forward light distribution. Die-cast end caps and extruded aluminum housing ensure many years of service. High impact, snap-in lens provides a secure, non-sagging fit.

*Ordering Notes

For pull chain and pillow switch, specify left or right location as viewed facing the headwall. NL rocker switch is located on opposite end of fixture from pull chain or pillow switch location.

Specifications subject to change. Please visit our web site for updated information.

SIERRA



Ordering Information

Example: HPW548-120-T8EL-11-LC-TR-AM

1	2	3	4	5	6	7
SERIES	VOLTAGE	BALLAST	LAMPING	SWITCHING	OPTIONS	FINISHES
HPW524 (24")	120	T8EL	T8, T5, T5HO	LC Class 2 UL® listed Low Voltage Controller (LVC)	TR Tamper Resistant Lens Bracket and Screws	FW Flat white finish
HPW536 (36")	277	T5EL	11 (1 Up, 1 Down)	LC1 LVC with pillow switch controlling down light only	NL 9w PL night light* with rocker switch	AM Designer white antimicrobial finish
HPW548 (48")		T5HO	T5 only	LC2 LVC with pillow switch controlling up and down light sequentially	OS Occupancy Sensor	CC Custom Color (please provide color # or sample)
			21 (2 Up, 1 Down)	S2R On/off pull chain on right (120v only)*	FH Fast-blo fuse	
			12 (1 Up, 2 Down)	S2L On/off pull chain on left (120v only)*	SB Slo-blo fuse	
			22 (2 Up, 2 Down)	S4R 4-pos pull chain on right (120v only)*	CO Grounded Convenience Outlet	
				S4L 4-pos pull chain on left (120v only)*		
				SX No switch		