



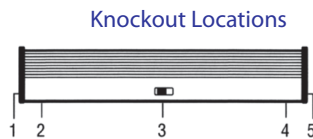

SPECTRA-SF (T5)

Dimensional Data

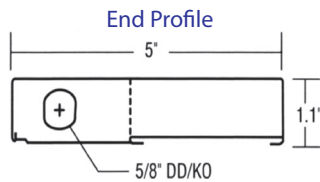

Photometric Data

Typical Counter Top Light Distribution
Surface Footcandle Values

Mounting Height 15"

	24"	12"	0"	12"	24"
0"	30	123	131	123	30
6"	22	83	124	83	22
12"	18	76	101	76	18
18"	14	27	64	27	14
24"	9	17	28	17	9
30"	3	8	11	8	3

Catalog No: HUC236-120V
1 Lamp: 21W T5

Specifications subject to change. Please visit our web site for updated information.

Specifications

- Construction:** 20GA CRS steel housing with no exposed fasteners.
- Electrical:** 120 or 277 volt.
- Lens:** Clear ribbed, high impact acrylic, snap in diffuser.
- Lamps:** Bi-pin T5 lamps (by others).
- Switching:** On/off rocker switch on right side or remote mounted switch by others. Rocker switch available in 120v or 277v series.
- Seismic:** Unit weighs less than 20lbs. OSHPD pre-approval not required.
- Linking:** 5/8 inch keyed, 3-conductor; 7-amp male to female power connectors mounted on fixture ends facilitates row mounting; allow 1/16 inch per connection (120v only).
- Mounting:** Easy key hole slots for quick and accurate mounting.
- Finishes:** Polyester powder coated after fabrication with either gloss white finish or gloss white antimicrobial finish.
- Listings:** UL and C-UL listed.
- Warranty:** 5-year limited warranty. Made in the USA by Healthcare Lighting's ISO certified facility in Fairview, PA.



Occupancy Sensor

Utilizes Passive Infrared technology which turns the under cabinet light off after 30 seconds of no motion detection. Time delay is field adjustable from 30 seconds to 30 minutes.

SPECTRA-SF (T5)



Ordering Information

Example: HUC212-120-S1-RS-LX-FW

1	2	3	4	5	6
SERIES	VOLTAGE	SWITCHING	OPTIONS	LINKING OPTIONS	FINISHES
HUC212 (12-5/16" - F8W - T5)	120	S1 On/off rocker	OS Occupancy Sensor	LX Linking power connectors	GW Gloss white finish
HUC222 (22-5/8" - F14W - T5)	277		CP 6' cord and plug	LE6 6" Linking extension	AM Gloss white antimicrobial finish
HUC234 (34-3/8" - F21W - T5)		SX No switch	RS Program rapid start ballast	LE12 12" Linking extension	CC Custom Color (please provide color # or sample)
HUC246 (46-3/16" - F28W - T5)			BW Bat wing diffuser	LE24 24" Linking extension	
			2T5 (2) Parallel T5 lamps on 1 circuit	<i>Linking options available in 120v units only.</i>	
			FH Fast-blo fuse		
			SB Slo-blo fuse		