




STRATUS

3' or 4' (T8 or T5)

Dimensional Data

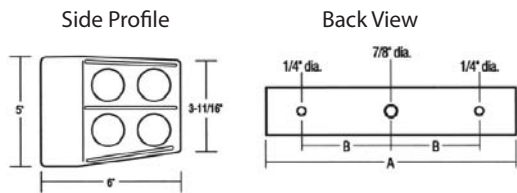

Fixture Dimensions

T8 Lamps

Length	A	B	C
3'	39-1/2"	17-1/2"	8-1/4"
4'	51-5/16"	23-3/8"	8-1/4"

T5 Lamps

Length	A	B	C
3'	37-3/4"	16-5/8"	8-1/4"
4'	49-1/2"	22-1/2"	8-1/4"

*Ordering Notes

For pull chain and pillow switch, specify left or right location as viewed facing the headwall. NL rocker switch is located on opposite end of fixture from pull chain or pillow switch location.


Specifications

- Construction:** Extruded aluminum housing, ballast tray and hinged door with die cast aluminum end caps. Ballast and lamp holders are mounted on a fully removable ballast tray with quick disconnect.
- Electrical:** 120 or 277 volt.
- Lamp Shield:** .125 prismatic acrylic lens with full length support channels.
- Lamps:** 3 foot nominal: 25w T8 or 21w T5 lamps (by others).
4 foot nominal: 32w T8 or 28w T5 lamps (by others).
- Seismic:** Unit weighs less than 20lbs. OSHPD pre-approval not required.
- Finishes:** Polyester powder coated after fabrication with either flat white or designer white antimicrobial finish.
- Listings:** UL and C-UL (1598: Medical and Dental luminaires).
- Warranty:** 5-year limited warranty. Made in the USA by Healthcare Lighting's ISO certified facility in Fairview, PA.

Laminate Door Inserts



Choose from our standard inserts on right or any pattern offered by Formica® or Wilsonart® to match your room decor.

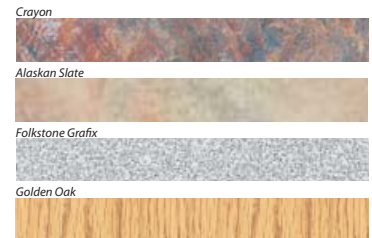

Specifications subject to change. Please visit our web site for updated information.

STRATUS



Ordering Information

Example: HPW14-120-T8EL-21-S2L--FW-GO

1	2	3	4	5	6	7	8
SERIES	VOLTAGE	BALLAST	LAMPING	SWITCHING	OPTIONS	FINISHES	LAMINATE DOOR INSERTS
HPW13 (36")	120	T8EL	11 (1 Up, 1 Down)	LC Class 2 UL® listed Low Voltage Controller (LVC)	NL Sw PL night* light with rocker switch	FW Flat white finish	FW Flat white
HPW14 (48")	277	T5EL	21 (2 Up, 1 Down)	LC1 LVC with pillow switch controlling down light only	MT Solid metal top plate	AM Designer white antimicrobial finish	CR Crayon
			12 (1 Up, 2 Down)	LC2 LVC with pillow switch controlling up and down light sequentially	FH Fast-blo fuse	CC Custom Color (please provide color # or sample)	AS Alaskan Slate
			22 (2 Up, 2 Down)	S2R On/off pull chain on right (120v only)*	SB Slo-blo fuse		FG Folkstone Grafix
				S2L On/off pull chain on left (120v only)*			GO Golden Oak
				S4R 4-pos pull chain on right (120v only)*			C Custom Specified
				S4L 4-pos pull chain on left (120v only)*			
				SX No switch			