





# TERON-SF MRI (T7)

## Dimensional Data

### Front Profile



### End Profile

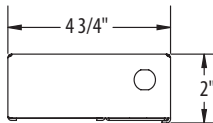

### Bottom Profile



Optional center mounted on/off rocker switch

## Specifications

- Construction:** 16GA die formed aluminum housing. All nonferrous fasteners.
- Electrical:** 120 volt only. Porcelain lamp holders with all nonferrous components; thermal protection is provided. Ability to connect to AC and DC power supplies.
- Lens:** Clear, impact resistant polycarbonate lay in diffuser.
- Lamps:** (3) 15w T7 lamps for 18" housing and (6) 15w T7 lamps for 36" housing (by others).
- Switching:** On/off rocker switch or remote mounted switch by others.
- Seismic:** Unit weighs less than 20lbs. OSHPD pre-approval not required.
- Mounting:** Easy key hole slots for quick and accurate mounting.
- Finishes:** Polyester powder coated after fabrication with either flat white finish or flat white antimicrobial finish.
- Listings:** UL and C-UL listed.
- Warranty:** 5-year limited warranty. Made in the USA by Healthcare Lighting's ISO certified facility in Fairview, PA.

Specifications subject to change. Please visit our web site for updated information.

## TERON-SF MRI



## Ordering Information

Example: HUC418-S1-120-AST-AM

1	2	3	4	5
<b>SERIES</b>	<b>SWITCHING</b>	<b>VOLTAGE</b>	<b>OPTIONS</b>	<b>FINISHES</b>
HUC418-MRI (18" housing) HUC436-MRI (36" housing)	S1 On/off rocker SX No switch	120 277	AST Automatic shutoff timer (1-15 minutes)	FW Flat white finish AM Designer white antimicrobial finish CC Custom Color (please provide color # or sample)