



TRILUME T5/HO w/ Exam 2X4

Dimensional Data


Side Profile (Grid)

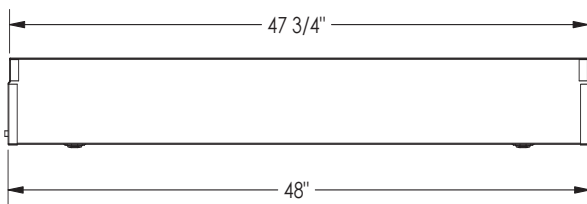

End Profile (Grid)

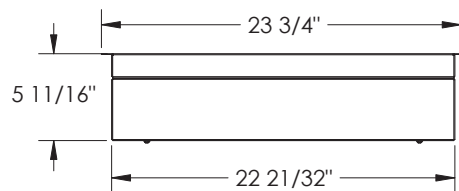

3 Lamp Ambient/4 Lamp Exam Profile



Specifications

- Construction:** 18GA steel housing and 24GA reflectors for flange or 1" to 1-1/2" grid ceilings.
- Electrical:** 120, 277 or universal voltage.
- Sanitary Lens:** An 18GA CRS door with clear, acrylic lens forms a sealed enclosure over entire length of fixture. The outer lens surface is smooth and completely wipeable for infection control.
- Lamp Shields:** Underneath Sanitary Lens, a perforated metal basket in middle of fixture conceals lamps in Ambient Compartment while extruded acrylic lenses conceal lamps in adjoining Exam Compartments.
- Lamps:**
- Ambient:** (2 or 3) 28w T5 lamps (by others); or (2) 54w T5HO lamps (by others). See LVC options below.
 - Exam:** (2) 28w T5 or (2) 54w T5HO lamps (1 lamp per exam compartment); or (4) 28w T5 lamps (2 lamps per exam compartment). Lamps and on/off line voltage switching (by others).
- Finishes:** Polyester powder coated after fabrication with either flat white or designer white antimicrobial finish.
- Listings:** UL and C-UL listed.
- Warranty:** 5-year limited warranty. Made in the USA by Healthcare Lighting's ISO certified facility in Fairview, PA.

Specifications subject to change. Please visit our web site for updated information.

TRILUME T5/HO w/ Exam (2X4)



Ordering Information

Example: HPT354-F-120-2LHO-SX-DM-4XT8-NLF-AM

1	2	3	4	5	6	7	8	9
SERIES	MOUNTING	VOLTAGE	AMBIENT (LAMPS)	AMBIENT (LVCs)	AMBIENT (LIGHT LEVELS)	EXAM LAMPS	OPTIONS	FINISHES
HPT354	G T-Grid F Flange	120 277 UNV	2LT5 2LHO 3LT5	LC Class 2 UL listed Low Voltage Controller (use for interface with existing nurse call pillow speaker/handset) LC1 LC plus 1-gang j-box cover with receptacle and pillow switch w/ 6' cord (use when nurse call system is unavailable) SX No LVC	1C 1 Circuit (On/off control of 2 or 3 lamp ambient profile) 2C 2 Circuits (Tri-level control of 3 lamp ambient profile) DM Dimming (Please specify type of ambient dimming. Switches/dimming controls by others. Only available with SX)	2XT5 2XHO 4XT5	NLF 9w 4-pin (2G7) PL Night Light (Available with 2 lamp ambient profile only) LED 1w white LED Night Light (Available with 2 lamp ambient profile only) FH Fast-blo fuse SB Slo-blo fuse	FW Flat white finish AM Designer white antimicrobial finish