





TRILUME T8 2X4

Dimensional Data


Side Profile

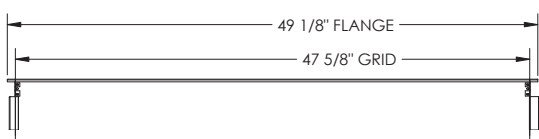

End Profile
(For both Grid and Flange)

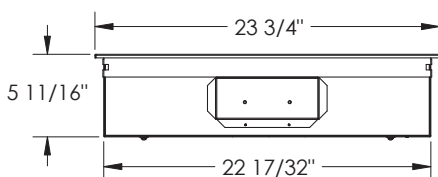

4 Lamp Profile
(2L and 3L Profiles also available)



Specifications

- Construction:** 18GA steel housing and 24GA reflectors for flange or 1" grid ceilings.
- Electrical:** 120, 277 or universal voltage.
- Lamp Shield:** Extruded acrylic lens basket with perforated acrylic insert.
- Lamps:** (2, 3 or 4) 32w T8 lamps (by others). See LVC options below.
- Sanitary Lens Option:** An 18GA CRS door with clear, acrylic lens forms a sealed enclosure over entire length of fixture. The outer lens surface is smooth and completely wipeable for infection control. Underneath sanitary lens, a perforated metal basket conceals ambient lamps. Perforated metal basket is polyester powder coated to match finish on housing.
- Finishes:** Polyester powder coated after fabrication with either flat white or designer white antimicrobial finish.
- Listings:** UL and C-UL listed.
- Warranty:** 5-year limited warranty. Made in the USA by Healthcare Lighting's ISO certified facility in Fairview, PA.

Specifications subject to change. Please visit our web site for updated information.



TRILUME T8 (2X4)

Ordering Information

Example: HPT324-F-277-2LT8-SX-DM-LED-FW

1	2	3	4	5	6	7	8
SERIES	MOUNTING	VOLTAGE	AMBIENT (LAMPS)	AMBIENT (LVCs)	AMBIENT (LIGHT LEVELS)	OPTIONS	FINISHES
HPT324	G T-Grid F Flange	120 277 UNV	2LT8 3LT8 4LT8	LC Class 2 UL listed Low Voltage Controller (use for interface with existing nurse call pillow speaker/handset) LC1 LC plus 1-gang j-box cover with receptacle and pillow switch w/ 6' cord (use when nurse call system is unavailable) SX No LVC	1C 1 Circuit (On/off control of 2, 3 or 4 lamp ambient profile) 2C 2 Circuits (Tri-level control of 3 lamp or bi-level control of 4 lamp ambient profile) DM Dimming (Please specify type of ambient dimming. Switches/dimming controls by others. Only available with SX)	SL Sanitary Lens NLF 9w 4-pin (2G7) PL Night Light (Available with 2 lamp ambient profile only) LED 1w white LED Night Light (Available with 2 lamp ambient profile only) FH Fast-blo fuse SB Slo-blo fuse	FW Flat white finish AM Designer white antimicrobial finish